

AMANA

TOP-LOADING HIGH EFFICIENCY WASHER USE AND CARE GUIDE

Read All Instructions Prior to Use 

Table of Contents (Original Instructions)

WASHER SAFETY	2	CYCLE GUIDE.....	6
WHAT'S NEW UNDER THE LID?	4	USING YOUR WASHER.....	7
SPECIFICATIONS.....	4	WASHER MAINTENANCE	10
CONTROL PANEL AND FEATURES	4	TROUBLESHOOTING	12



WASHER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Read all instructions before using the washer. 
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with petrol, dry-cleaning solvents, or other flammable or explosive substances as they give off vapours that could ignite or explode.
- Do not add petrol, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the washer, turn on all hot water taps and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning safe use of the appliance by persons responsible for their safety. Such persons must also understand the possible hazards involved during use.
- Cleaning and user maintenance by children must be supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Children less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Before the washer is removed from service or discarded, remove the door or lid.
- Do not reach into the washer if the drum, tub, or agitator is moving.
- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not continue to use this appliance if it appears to be faulty.
- Do not repair or replace any part of the washer or attempt any maintenance unless specifically recommended in this Use and Care Guide. Repairs and servicing should only be carried out by Whirlpool authorized service personnel.
- See Installation Instructions for earthing instructions.
- If the supply cord is damaged, it must be replaced by Whirlpool authorized service personnel in order to avoid a hazard.
- Use only new hoses to connect the appliance to the water supply. Used hoses must not be used and should be discarded.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

- The appliance must be disconnected from its power source during service and when replacing parts. The power cord plug should be visible at all times once disconnected to verify that power remains removed.
- After installation, access to power cord must be maintained at all times in order to ensure immediate deactivation of the washer in case of emergency.
- Bottom opening must not be obstructed by a carpet.
- See Installation Instructions for important safety instructions.
- Water pressure of 55 kPa–862 kPa (8 psi–125 psi).
- Rated maximum capacity: 12 kg
- Do not use an extension cord or an electrical portable outlet device.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices, and other working environments;
 - Farm houses;
 - By clients in hotels, motels, and other residential-type environments;
 - Bed and breakfast-type environments;
 - Areas for communal use in blocks of flats or in launderettes.

SAVE THESE INSTRUCTIONS

ADDITIONAL SAFETY INSTRUCTIONS

- Do not use this washer if it appears to be damaged or is defective. Contact the owner of the washer to have proper repairs made.
- Do not use this washer if industrial chemicals have been used for cleaning.

⚠ WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth pin.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ WARNING



Electrical Shock Hazard

Disconnect all power supplies before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install washer.

Failure to do so can result in back or other injury.

WHAT'S NEW UNDER THE LID?

Your new washer will operate differently than your past agitator-style washer.



Lid Locked

When the Lid Locked light is on, the lid is locked and cannot be opened. When the light is off, the lid is unlocked and can be opened. If you need to open the lid to add a garment, you must press START/STOP/PAUSE/UNLOCK LID and wait for the lid to unlock. The lid will only unlock and the Lid Locked light will only turn off after washer movement has stopped. Depending on when in the cycle you try to pause, it may take several seconds to several minutes for the lid to unlock.



Sounds

At different stages of the wash cycle, you may hear sounds and pauses that are different from those of your previous washer. For example, you may hear a clicking and hum at the beginning of the cycle as the lid lock goes through a self-test. There will be different kinds of humming and whirring sounds as the agitator tests for load balance or moves the load. And, sometimes, you may hear nothing at all as the washer allows time for clothes to soak.

IMPORTANT:

- Washer will not operate if the lid is open.
- Washer will not begin to fill with water until the lid is closed.
- The washer cycle will cancel and water will automatically drain if the lid is left open for more than 10 minutes.

SPECIFICATIONS

These units are sold in multiple regions with different requirements for measuring capacity. Below are a few of the valid forms of measure posted on this product:


Rated Maximum Capacity: This represents the maximum capacity of dry linens and textiles which the manufacturer declares can be treated in a specific cycle.

GULF (GSO) Water Consumption: Water consumption which the manufacturer declares will be used in a specific cycle.

Models	4KNTW3100JW 4KNTW3200JW 4KNTW3300JW 4KNTW3100JW2 4KNTW3200JW2 4KNTW3300JW2
Rated Voltage	220–240 V
Rated Frequency	60 Hz
Rated Current (Maximum)	4.0 A
Rated Power Input	885 W
Rated Maximum Capacity	12 kg (26 lb)
GULF (GSO) Water Consumption	136 L
Inlet Water Pressure (Maximum)	862 kPa
Inlet Water Pressure (Minimum)	55 kPa
Height	1092 mm (43")
Width	699 mm (27½")
Depth	686 mm (27")
Net Weight	58 kg (127.6 lb)

NOTE: Sound Pressure Level, Lpa: 58 dBA (uncertainty, kPa: +/-10 dBA).

CONTROL PANEL AND FEATURES

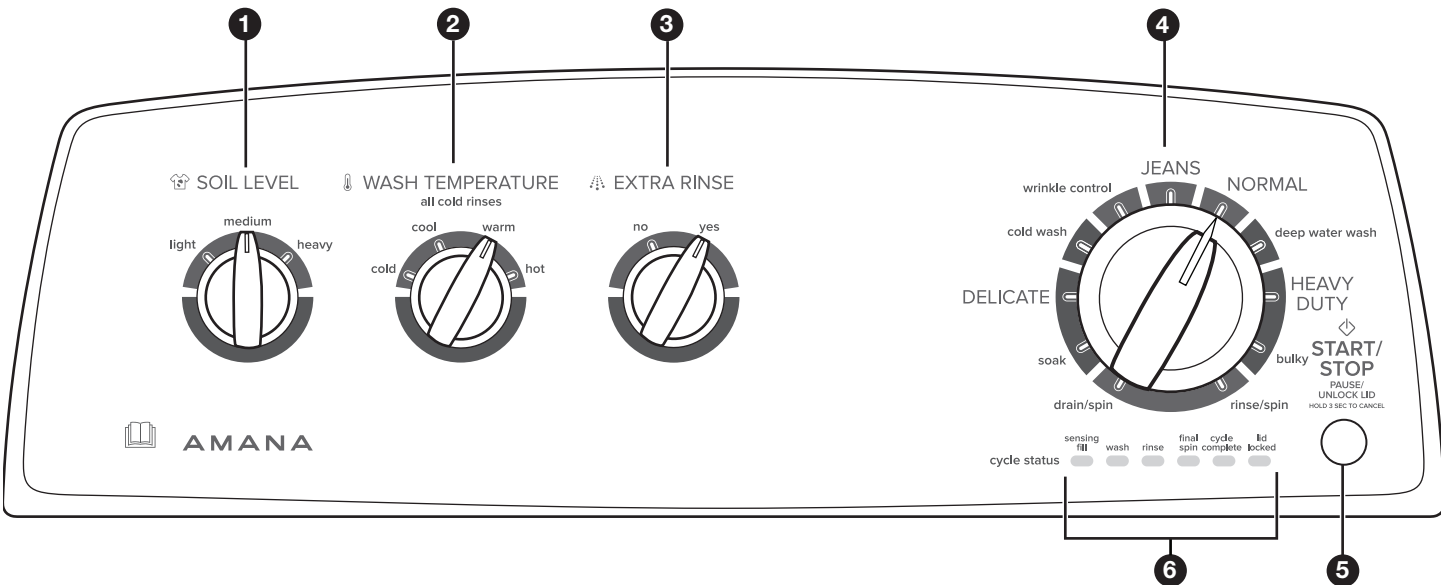

1 SOIL LEVEL
Soil Level settings adjust the agitation time as needed for your load. The Light setting is for lightly soiled garments and the Heavy setting is for garments that need longer wash time to release the soils from the fabric.

2 WASH TEMP
Temperature Control senses and maintains uniform water temperatures by regulating incoming warm and cool water. This ensures the correct temperature is used to maximize cleaning while protecting the garments.

Select a wash temperature based on the type of fabric and soils being washed. For best results and following the garment label instructions, use the warmest wash water safe for your fabric.

NOTES:

- The temperature of hot and cold water depends upon the temperature of the water entering your washer.
- Warm and cool water will be cooler than what your previous washer provided.
- Even in a cold and cool water wash, some warm water may be added to the washer to maintain a minimum temperature.

3 EXTRA RINSE

This option can be used to automatically add a second rinse to most cycles.

NOTE: To open the lid during the rinse or extra rinse phase after the first spin, you must first press START/STOP/PAUSE/UNLOCK LID to unlock the lid.

4 WASH CYCLE KNOB

Use the Wash Cycle knob to select available cycles on your washer. Turn the knob to select a cycle for your laundry load. See “Cycle Guide” for detailed descriptions of cycles.

5 START/STOP/PAUSE/UNLOCK LID BUTTON

- Press to start the selected cycle.
- Press again to pause the cycle and unlock the lid.
- Press and hold for 3 seconds to cancel a cycle.

NOTE: If the washer is spinning, it may take several minutes to unlock the lid.

Use to Manually Soak Garments:

Press START/STOP/PAUSE/UNLOCK LID and keep the lid closed. After items have soaked for the desired time, press START/STOP/PAUSE/UNLOCK LID to resume the wash cycle.

6 CYCLE STATUS LIGHTS INDICATOR



The Cycle Status Lights show the progress of a cycle. At each stage of the process, you may notice sounds or pauses that are different from traditional washers.

SENSING FILL



When the Start/Stop/Pause/Unlock Lid button is pressed, the washer will fill with water and begin the wash cycle.

WASH



You will hear the agitator moving the load. The motor sounds may change at different stages in the cycle. The wash time is determined by the selected soil level.

RINSE




You will hear sounds similar to the wash cycle as the washer rinses and moves the load. You may hear the motor turning on briefly (short hum) to move the basket while filling.

FINAL SPIN



The washer spins the load at increasing speeds for proper water removal, based on the selected cycle.


CYCLE COMPLETE



Once the cycle is complete, this light will come on. Remove the load promptly for best results.

LID LOCKED

To allow for higher spin speeds, the lid will lock and the Lid Locked light will turn on. When this light is lit, the lid is locked and cannot be opened. When this light is off, the lid is unlocked and can be opened.

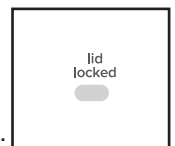

If you need to open the lid, press START/STOP/PAUSE/UNLOCK LID. The lid will unlock once the washer movement has stopped. This may take several minutes if the load was spinning at high speed. Press START/STOP/PAUSE/UNLOCK LID again to resume the cycle.



CYCLE GUIDE

For best fabric care, choose the cycle that best fits the load being washed. Not all cycles and options are available on all models.

Items to wash:	Cycle:	Temperature*:	Spin Speed:	Cycle Details:
Sturdy fabrics, colorfast items, towels, jeans	Jeans	Hot Warm Cool Cold	High	Use this cycle for heavily soiled or sturdy items. This cycle uses spray rinses only. Use this cycle for cleaning the interior of the washer. See "Washer Care."
Cottons, linens, and mixed garment loads	Normal	Hot Warm Cool Cold	High	Use this cycle for normally soiled cottons and mixed fabric loads. This cycle features a progressive spray rinse.
Casual and mixed loads, jeans, towels, sturdy fabrics	Deep Water Wash	Hot Warm Cool Cold	High	Provides additional water and alternating wash action for heavily soiled mixed loads. Water-level sensing process may take longer for some items than for others because they will absorb more water than other fabric types.
Cotton heavy soiled bright or darkly colored items, linens, casual, and mixed loads	Heavy Duty**	Hot Warm Cool Cold	High	Use this cycle for heavily soiled or sturdy items. This cycle features a progressive spray rinse. This cycle complies with SASO 2885 (standard cotton program 40°C (104°F) using Cold temperature and standard cotton program 60°C (140°F) using Hot temperature).
Large items such as sheets, sleeping bags, small comforters, jackets, small washable rugs	Bulky	Hot Warm Cool Cold	Low	Use this cycle to wash large items such as jackets and small comforters. The washer will fill with enough water to wet down the load before the wash portion of the cycle begins, and uses a higher water level than other cycles.
Swimsuits and items requiring rinsing without detergent	Rinse/Spin	Cold rinse only	High	Combines a rinse and high-speed spin for loads requiring an additional rinse cycle or to complete a load after power interruption. Also use for loads that require rinsing only.
Dripping wet or hand-washed items	Drain/Spin	N/A	High	This cycle uses a spin to shorten drying times for heavy fabrics or special-care items washed by hand. Use this cycle to drain washer after cancelling a cycle or completing a cycle after a power failure.
Heavily soiled fabrics	Soak	Hot Warm Cool Cold	No Spin	Use this cycle to soak small spots of set-in stains on fabrics. The washer will use intermittent agitation and soaking. After time has expired, water will drain, but the washer will not spin. Cycle is complete.
Machine-wash silks, lingerie, washable wools	Delicate	Hot Warm Cool Cold	Low	Use this cycle to wash lightly soiled garments indicating "Machine Washable Silks" or "Gentle" cycle on the care label. Place small items in mesh garment bags before washing. This cycle features a spray rinse.
Bright or darkly colored cottons, linens, casual, and mixed loads	Cold Wash	Cold	High	Cold water with an additional wash action gently lifts stains while caring for fabrics. Settings may be adjusted as desired but must use only cold water settings.
Lightly soiled shirts, blouses, trousers, pants, and dresses	Wrinkle Control	Hot Warm Cool Cold	Med	This cycle combines low-speed tumbling and medium speed spin for gentle fabric care and reduced wrinkling.

*All rinses are cold.

**The test program used at the 40°C (104°F) standard cotton program and the 60°C (140°F) standard cotton program. With clarification of the following data of each program:

	Cotton 40°C (104°F)	Cotton 60°C (140°F)	Cotton 60°C (140°F)
	Half Load	Half Load	Full Load
1. Number of Washing Cycles	1	1	1
a) Water quantity for each washing cycle (L)	24.8	24.8	42.5
b) Time for each washing cycle (minutes)	5.5	5.5	6
2. Number of Rinse Cycles	2	2	2
a) Water quantity for rinse cycle #1 (L)	33.4	32.8	48.3
a) Water quantity for rinse cycle #2 (L)	46.9	46.6	72.1
b) Time for rinse cycle #1 (minutes)	258	258	260
b) Time for rinse cycle #2 (minutes)	14	14	17
3. Number of Spin Cycles	2	2	2
a) Time for each spin cycle #1 (minutes)	3	3	3
a) Time for spin cycle #2 (minutes)	4	4	4

NOTE: "Wash" LED might be turned on during all Agitation phase. This is normal and exclusive to this cycle.

USING YOUR WASHER

⚠ WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.


Do not remove earth pin.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

1. Sort and prepare your laundry

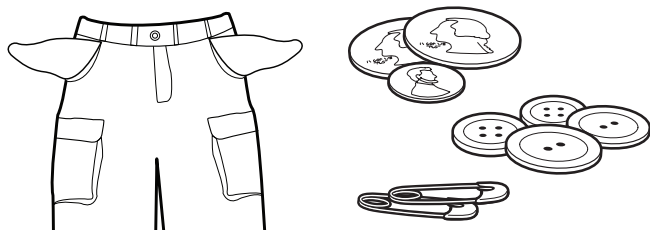


- Empty pockets. Loose change, buttons, or any small object can pass under the HE agitator and become trapped, causing unexpected sounds.
- Sort items by recommended cycle, water temperature, and colorfastness.
- Separate heavily soiled items from lightly soiled.
- Separate delicate items from sturdy fabrics.
- Do not dry items if stains remain after washing, because heat can set stains into fabric.
- Treat stains promptly.
- Close zippers, fasten hooks, tie strings and sashes, and remove non-washable trim and ornaments.
- Mend rips and tears to avoid further damage to items during washing.

Helpful Tips:

- When washing water-proof or water-resistant items, load evenly.
- Use mesh garment bags to help avoid tangling when washing delicate or small items.
- Turn knits inside out to avoid pilling. Separate lint-takers from lint-givers. Synthetics, knits, and corduroy fabrics will pick up lint from towels, rugs, and chenille fabrics.

NOTE: Always read and follow fabric care label instructions to avoid damage to your items.

2. Add laundry products

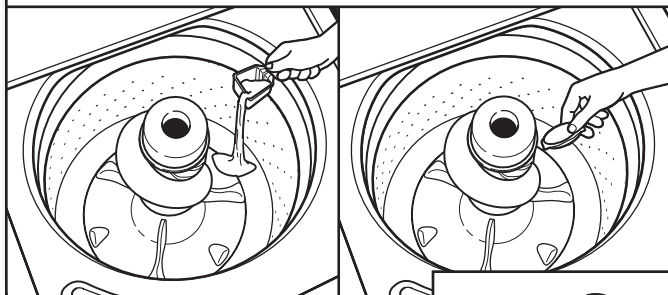

Add a measured amount of HE detergent or single-dose laundry packet into the basket.


If using Oxi-type boosters, color-safe bleach, or fabric-softener crystals, add to the bottom of the washer basket before adding clothes.

IMPORTANT: Use only High Efficiency detergents. The package will be marked "HE" or "High Efficiency." Using regular detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component failures and noticeable mold or mildew. HE detergents are made to produce the right amount of suds for the best performance.

NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.




3. Load laundry into washer

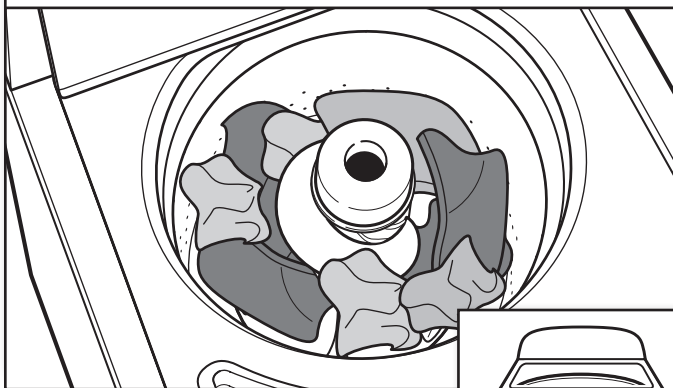


Load garments in loose heaps evenly around basket wall. For best results, do not pack the load tightly. Do not wrap large items such as sheets around the HE agitator; load them in loose piles around the sides of the basket. Try mixing different-sized items to reduce tangling.

IMPORTANT: Do not tightly pack or force items into washer. Items need to move freely for best cleaning and to reduce wrinkling and tangling.

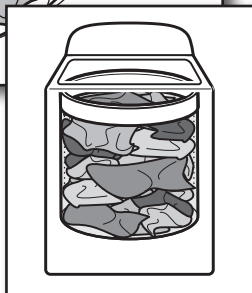


5. Add fabric softener

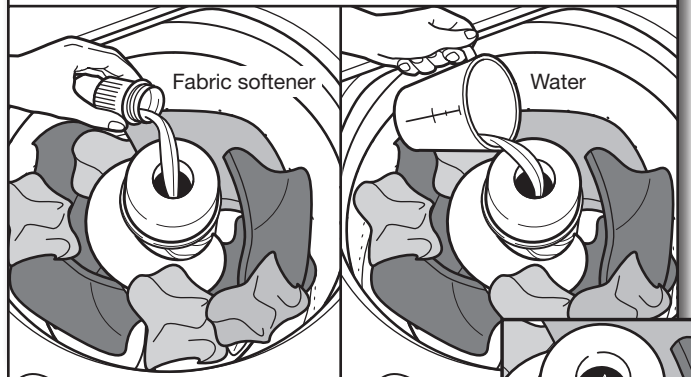

Pour a measured amount of liquid fabric softener into dispenser; always follow manufacturer's directions for correct amount of fabric softener based on your load size.

Dilute liquid fabric softener by filling the dispenser with warm water until liquid reaches the underside of the rim. See max fill line arrows.


4. Add liquid chlorine bleach to dispenser

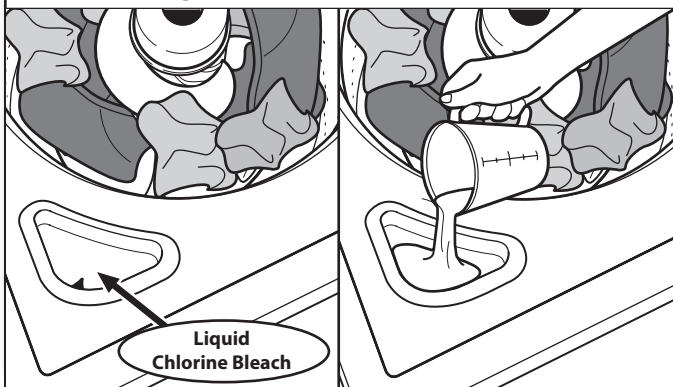

Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or Oxi products in the same cycle with liquid chlorine bleach.


6. Turn on the machine by pressing Start/Pause button or rotating the Cycle selection knob, LEDs 2, 3, 4 and 5 should all light up. LED 1 will flash and LED 6 will remain off.

7. Select cycle

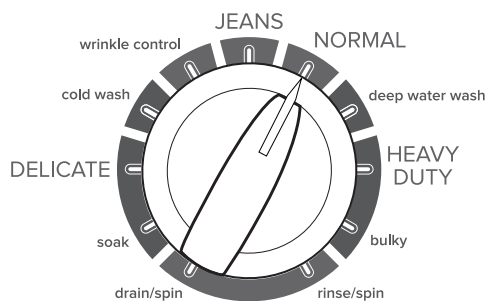

Turn cycle knob to choose your wash cycle. For more information, see "Cycle Guide."


8. Select SOIL LEVEL

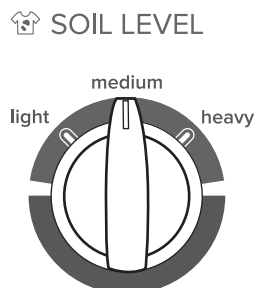

Appearance may vary.

Soil Level settings adjust the agitation time as needed for your load. The Light setting is for lightly soiled garments and the Heavy setting is for garments that need longer wash time to release the soils from the fabric.

9. Select WASH TEMPERATURE

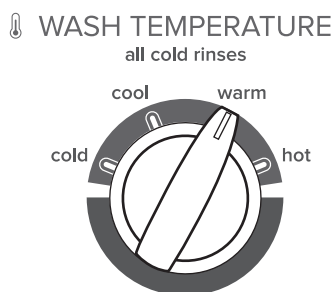

Appearance may vary.

Once you select a cycle, select the desired wash temperature by turning the Temperature knob to the appropriate setting based on your load. All rinses are tap cold.

NOTE: Always read and follow fabric care label instructions to avoid damage to your garments.

Wash Temp	Suggested Fabrics
Hot Some cold water is added to save energy. This may be cooler than your hot water heater setting.	Whites and pastels Durable items Heavy soils
Warm Some cold water will be added, so this may be cooler than what your previous washer provided.	Bright colors Moderate to light soils
Cool Warm water is added to assist in soil removal and to help dissolve detergents. Cool is slightly warmer than Cold.	Colors that bleed or fade Light soils
Cold Warm water may be added to assist in soil removal and to help dissolve detergents.	Dark colors that bleed or fade Light soils
Tap Cold This is the temperature from your faucet.	Dark colors that bleed or fade Light soils

10. Select EXTRA RINSE (on some models)



Appearance may vary.

Set at "Yes" to add an extra rinse to your cycle.

11. Press START/STOP/PAUSE/ UNLOCK LID to begin wash cycle



Press the START/STOP/PAUSE/UNLOCK LID button to start the wash cycle. When the cycle has finished, the Cycle Complete indicator will light. Promptly remove garments after cycle has completed to avoid odor and reduce wrinkling and rusting of metal hooks, zippers, and snaps.

Unlocking the lid to add garments

If you need to open the lid to add 1 or 2 missed garments: Press START/STOP/PAUSE/UNLOCK LID; the lid will unlock once the washer movement has stopped. This may take several minutes if the load was spinning at high speed. Then close lid and press START/STOP/PAUSE/UNLOCK LID again to restart the cycle.

If lid is left open for more than 10 minutes, the water will pump out automatically.

Manually soaking garments

Press START/STOP/PAUSE/UNLOCK LID and keep the lid closed. After items have soaked for the desired time, press START/STOP/PAUSE/UNLOCK LID to resume the wash cycle.

WASHER MAINTENANCE

WATER INLET HOSES

Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Periodically inspect and replace inlet hoses if bulges, kinks, cuts, wear, or leaks are found.

When replacing your inlet hoses, mark the date of replacement on the label with a permanent marker.

NOTE: This washer does not include inlet hoses. See the Installation Instructions for more information.

WASHER CARE

Recommendations to Help Keep Your Washer Clean and Performing at its Best

1. Always use High Efficiency (HE) detergents and follow the detergent manufacturer's instructions regarding the amount of detergent to use. Never use more than the recommended amount because that may increase the rate at which detergent and soil residue accumulate inside your washer, which in turn may result in undesirable odor.
2. Use warm and hot wash water settings sometimes (not exclusively cold-water washes) because they do a better job of controlling the rate at which soils and detergent accumulate.
3. Always leave the washer lid open between uses to help dry out the washer and prevent the buildup of odor-causing residue.

Cleaning Your Top Loading Washer

Read these instructions completely before beginning the routine cleaning processes recommended below. This washer maintenance procedure should be performed, at a minimum, once per month or every 30 wash cycles, whichever occurs sooner, to control the rate at which soils and detergent may otherwise accumulate in your washer.

Cleaning the Inside of the Washer

To keep your washer odor-free, follow the usage instructions provided above and use this recommended monthly cleaning procedure:

Recommended Cycle for Cleaning the Washer

Refer to the "Cycle Guide" for the optimal cycle for cleaning the inside of the washer. Use this cycle with Washer Cleaner or liquid chlorine bleach as described below.

Begin procedure

1. Clean Washer Cycle Procedure (recommended for best performance):
 - a. Open the washer lid and remove any clothing or items.
 - b. Place a Washer Cleaner tablet in the bottom of the washer basket.
 - c. Do not add any detergent or other chemical to the washer when following this procedure.
 - d. Close the washer lid.
 - e. Select the cycle recommended for cleaning the inside of the washer.
 - f. Press the START/STOP/PAUSE/UNLOCK LID button to start the cycle.

NOTE: For best results, do not interrupt cycle. If cycle must be interrupted, press START/STOP/PAUSE/UNLOCK LID once. After the cycle has stopped, run a Rinse & Spin cycle to rinse cleaner from washer.

WASHER CARE (cont.)

2. Chlorine Bleach Procedure (Alternative):

- a. Open the washer lid and remove any clothing or items.
- b. Add 1 cup (236 mL) of liquid chlorine bleach to the bleach compartment.

NOTE: Use of more liquid chlorine bleach than is recommended above could cause washer damage over time.

- c. Close the washer lid.
- d. Do not add any detergent or other chemical to the washer when following this procedure.
- e. Select the cycle recommended for cleaning the inside of the washer.
- f. Press the START/STOP/PAUSE/UNLOCK LID button to start the cycle.

NOTE: For best results, do not interrupt cycle. If cycle must be interrupted, press START/STOP/PAUSE/UNLOCK LID once. After the cycle has stopped, run a Rinse & Spin cycle to rinse bleach from washer.

Cleaning the Dispensers

After a period of using your washer, you may find some residue buildup in the washer's dispensers. To remove residue from the dispensers, wipe them with a damp cloth and towel dry. Do not attempt to remove the dispensers or trim for cleaning. The dispensers and trim are not removable. If your model has a dispenser drawer, however, remove the drawer and clean it before or after you run the Clean Washer cycle. Use an all-purpose surface cleaner, if needed.

Cleaning the Outside of the Washer

Use a soft, damp cloth or sponge to wipe away any spills. Use only mild soaps or cleaners when cleaning external washer surfaces.

IMPORTANT: To avoid damaging the washer's finish, do not use abrasive products.

WARNING

Excessive Weight Hazard

Use two or more people to move and install washer.

Failure to do so can result in back or other injury.

NON-USE AND VACATION CARE

Operate your washer only when you are home. If moving, or not using your washer for a period of time, follow these steps:

1. Unplug or disconnect power to washer.
2. Turn off water supply to washer, to avoid flooding due to water-pressure surge.

WINTER STORAGE CARE

IMPORTANT: To avoid damage, install and store washer where it will not freeze. Some water may stay in hoses, and freezing can damage washer. If storing or moving during freezing weather, winterize your washer.

To winterize washer:

1. Shut off both water faucets; disconnect and drain water inlet hoses.
2. Put 1 quart (1 L) of R.V.-type antifreeze in basket and run washer on Rinse & Spin cycle for about 30 seconds to mix antifreeze and remaining water.
3. Unplug washer or disconnect power.

TRANSPORTING YOUR WASHER

1. Shut off both water faucets. Disconnect and drain water inlet hoses.
2. If washer will be moved during freezing weather, follow "Winter Storage Care" directions before moving.
3. Disconnect drain hose from drain system and drain any remaining water into a pan or bucket. Disconnect drain hose from back of washer.
4. Unplug power cord.
5. Place inlet hoses and drain hose inside washer basket.
6. Drape power cord over edge and into washer basket.
7. Place packing tray from original shipping materials back inside washer. If you do not have packing tray, place heavy blankets or towels into basket opening. Close lid and place tape over lid and down front of washer. Keep lid taped until washer is placed in new location. Transport washer in upright position.

WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth pin.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

REINSTALLING/USING WASHER AGAIN

To reinstall washer after non-use, vacation, winter storage, or moving:

1. Refer to Installation Instructions to locate, level, and connect washer.
2. Before using again, run washer through the following recommended procedure:

To use washer again:

1. Flush water pipes and hoses. Reconnect water inlet hoses. Turn on both water faucets.
2. Plug in washer or reconnect power.
3. Run washer through jeans cycle to clean washer and remove any antifreeze. Use half the manufacturer's recommended amount of detergent for a medium-size load.

TROUBLESHOOTING

First try the solutions suggested here to possibly avoid the cost of a service call.

If you experience	Possible Causes	Solution
Vibration or Off-Balance		
Check the following for proper installation or see “Using Your Washer” section.	Feet may not be in contact with the floor.	Front and rear feet must be in firm contact with floor, and washer must be level to operate properly.
	Washer may not be level.	Check floor for flexing or sagging. If flooring is uneven, a 19 mm (3/4") piece of plywood under your washer will reduce sound.
		See “Level the Washer” in Installation Instructions.
	Load could be unbalanced.	Load dry items in loose heaps evenly around basket wall. Adding wet items to washer or adding more water to basket could unbalance washer.
		Wash smaller loads to reduce imbalance.
		Do not tightly pack. Avoid washing single items.
		Use jeans cycle and Heavy or Extra Heavy Soil Level for oversized, non-absorbent items such as comforters or poly-filled jackets. See “Cycle Guide”.
		See “Cycle Guide” and “Using Your Washer” in this Use and Care Guide.
Noises		
Clicking or metallic noises	Objects caught in washer drain system.	Empty pockets before washing. Loose items such as coins could fall between basket and tub or may block pump. It may be necessary to call for service to remove items.
		It is normal to hear metal items on clothing such as metal snaps, buckles, or zippers touch against the basket.
Gurgling or humming	Washer may be draining water.	It is normal to hear the pump making a continuous humming sound with periodic gurgling or surging as final amounts of water are removed during the Drain/Spin cycles.
Humming	Load sensing may be occurring.	You may hear the hum of the sensing spins after you have started the washer. This is normal.
Whirring	Basket deceleration may be occurring.	You may hear the whirring sound of the basket decelerating. This is normal.
Water Leaks		
Check the following for proper installation:	Washer not level.	Water may splash off basket if washer is not level.
	Fill hoses not attached tightly.	Tighten fill hose connection.
	Fill hose washers.	Make sure all four fill hose flat washers are properly seated.
	Drain hose connection.	Pull drain hose from washer cabinet and properly secure it to drain pipe or laundry tub.
	Check household plumbing for leaks or clogged sink or drain.	Water can back up out of a clogged sink or drain pipe. Check all household plumbing for leaks (laundry tubs, drain pipe, water pipes, and faucets).
	Washer not loaded as recommended.	Unbalanced loading can cause basket to be out of alignment and cause water to splash off tub. See “Using Your Washer” for loading instructions.

TROUBLESHOOTING

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth pin.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

First try the solutions suggested here to possibly avoid the cost of a service call.

If you experience	Possible Causes	Solution
Washer Not Performing As Expected		
Washer won't run or fill, washer stops working, or wash light remains on (indicating that the washer was unable to fill appropriately)	Check for proper water supply.	Both hoses must be attached and have water flowing to inlet valve.
		Both hot and cold water faucets must be turned on.
		Check that inlet valve screens have not become clogged.
		Check for any kinks in inlet hoses, which can restrict water flow.
	Check proper electrical supply.	Plug power cord into an earthed outlet.
		Do not use an extension cord.
		Ensure there is power to outlet.
		Reset a tripped circuit breaker. Replace any blown fuses. NOTE: If problems continue, contact an electrician.
Washer not draining/spinning, loads are still wet, or spin light remains on (indicating that the washer was unable to pump out water within 10 minutes)	Normal washer operation.	Lid must be closed for washer to run.
		Washer will pause during certain phases of cycle. Do not interrupt cycle.
	Small items may have been caught in pump or between basket and tub, which can slow draining.	Empty pockets and use garment bags for small items.
	Use a cycle with a low spin speed.	Cycles with lower spin speeds remove less water than cycles with high spin speeds. Use the recommended cycle/spin speed for your garment. To remove extra water in the load, select Drain & Spin. Load may need to be rearranged to allow even distribution of the load in the basket.
	The washer may be tightly packed or unbalanced.	Tightly packed or unbalanced loads may not allow the washer to spin correctly, leaving the load wetter than normal. Evenly arrange the wet load for balanced spinning. Select the Drain & Spin cycle to remove excess water. See "Using Your Washer" for loading recommendations.

TROUBLESHOOTING

First try the solutions suggested here to possibly avoid the cost of a service call.

If you experience	Possible causes	Solution
Washer Not Performing As Expected (cont.)		
Washer not draining/spinning, loads are still wet, or spin light remains on (indicating that the washer was unable to pump out water within 10 minutes) (cont.)	Check plumbing for correct drain hose installation. Drain hose extends into standpipe further than 114 mm (4.5").	Check drain hose for proper installation. Use drain hose form and securely attach to drain pipe or tub. Do not tape over drain opening. Lower drain hose if the end is higher than 2.4 m (96") above the floor. Remove any clogs from drain hose.
	Too much detergent causing suds to slow or stop draining and spinning.	Always measure and follow detergent directions for your load. To remove extra suds, select Rinse & Spin. Do not add detergent.
Dry spots on load after cycle	High speed spins extract more moisture than your previous washer.	The high spin speeds combined with air flow during the final spin can cause items near the top of the load to develop dry spots during the final spin. This is normal.
	Added extra garments to the load after the sensing/fill phase.	Add only one or two additional garments after washer has started.
Incorrect or wrong wash or rinse temperatures	Check for proper water supply.	Make sure hot and cold inlet hoses are not reversed.
		Both hoses must be attached to both washer and faucet, and have both hot and cold water flowing to inlet valve.
		Check that inlet valve screens are not clogged.
		Remove any kinks in hoses.
	Energy saving controlled wash temperatures.	This washer uses cooler wash and rinse water temperatures than traditional top-load washers. This includes cooler hot and warm washes.
Load not rinsed	Check for proper water supply.	Make sure hot and cold inlet hoses are not reversed.
		Both hoses must be attached and have water flowing to the inlet valve.
		Both hot and cold water faucets must be on.
		Inlet valve screens on washer may be clogged.
		Remove any kinks in the inlet hose.
	Not using HE detergent or using too much HE detergent.	The suds from too much detergent can keep washer from operating correctly. Always measure detergent and follow detergent directions based on load size and soil level.
	Washer not loaded as recommended.	The washer is less efficient at rinsing when load is tightly packed.
		Load garments in loose heaps evenly around the basket wall. Load with dry items only.
		Use cycle designed for the fabrics being washed.
		Add only one or two additional garments after washer has started.
		Use Bulky Items cycle for higher water fill, or set Water Level knob to Deep Water Wash setting. See "Cycle Guide" to match your load with the best cycle.
Sand, pet hair, lint, etc. on load after washing	Heavy sand, pet hair, lint, and detergent or bleach residues may require additional rinsing.	Add 2 Rinses to the selected cycle and/or use PowerWash cycle or Deep Water Wash option.
Load is tangling	Washer not loaded as recommended.	See "Using Your Washer" section.
		Select a cycle with a slower wash action and spin speed; however, items will be wetter than those using a higher speed spin. Use Bulky Items cycle for higher water fill, or set Water Level knob to Deep Water Wash setting. See the "Cycle Guide" to match your load with the best cycle.
		Load garments in loose heaps evenly around the basket wall.
		Reduce tangling by mixing types of load items. Use the recommended cycle for the type of garments being washed.

TROUBLESHOOTING

First try the solutions suggested here to possibly avoid the cost of a service call.

If you experience	Possible Causes	Solution
Washer Not Performing As Expected (cont.)		
Not cleaning or removing stains	Added more water to washer.	Washer senses load size and adds correct amount of water. This is normal and necessary for clothes to move. It is normal for the wash load to be not completely covered in water. Added water results in less effective cleaning.
	Washer not loaded as recommended.	Washer is less efficient at cleaning when load is tightly packed.
		Load garments in loose heaps evenly around the basket wall. Load with dry items only.
		Add only one or two additional garments after washer has started.
	Adding detergent on top of load.	Add detergent, oxi products, and color-safe bleach to the bottom of the basket before adding the load items.
	Not using HE detergent or using too much HE detergent.	The suds from regular detergent can keep washer from operating correctly.
		Use only HE detergent. Be sure to measure correctly.
		Always measure detergent and follow manufacturer's directions based on load size and soil level.
	Not using correct cycle for fabric type.	Use a higher soil level cycle option and warmer wash temp to improve cleaning.
		Use PowerWash cycle for tough cleaning. See the "Cycle Guide" to match your load with the best cycle.
	Not using dispensers.	Use dispensers to avoid chlorine bleach and fabric softener staining.
		Load dispensers before starting a cycle.
		Avoid overfilling.
		Do not add products directly onto load.
	Not washing like colors together.	Wash like colors together and remove promptly after the cycle is complete to avoid dye transfer.
Incorrect dispenser operation	Clogged dispenser.	Load dispensers before starting a cycle.
		Use only liquid chlorine bleach in the bleach dispenser. Use only fabric softener in the fabric softener dispenser.
	Rinse Option knob not set for fabric softener option.	Set Rinse Option knob to 1 Rinse with Fabric Softener or 2 Rinses with Fabric Softener when using fabric softener dispenser.
Fabric damage	Sharp items were in pockets during wash cycle.	Empty pockets, zip zippers, and snap or hook fasteners before washing to avoid snags and tears.
	Strings and straps could have tangled.	Tie all strings and straps before starting wash load.
	Items may have been damaged before washing.	Mend rips and broken threads in seams before washing.
	Fabric damage can occur if load is tightly packed.	Load garments in loose heaps evenly around the basket wall. Load with dry items only.
		Use cycle designed for the fabrics being washed.
		Add only one or two additional garments after washer has started.
	Liquid chlorine bleach may have been added incorrectly.	Do not pour liquid chlorine bleach directly onto load. Wipe up bleach spills.
		Undiluted bleach will damage fabrics. Do not use more than recommended by manufacturer.
		Do not place load items on top of bleach dispenser when loading and unloading washer.
	Garment care instructions may not have been followed.	Always read and follow garment manufacturer's care label instructions. See the "Cycle Guide" to match your load with the best cycle.

TROUBLESHOOTING

First try the solutions suggested here to possibly avoid the cost of a service call.

If you experience	Possible Causes	Solution
Washer Not Performing As Expected (cont.)		
Odors	Monthly maintenance not done as recommended.	See "Washer Care" in Washer Maintenance.
		Unload washer as soon as cycle is complete.
	Using too much detergent.	Be sure to measure correctly. Always follow the manufacturer's directions.
		See "Washer Care" section.
Lid Locked light is flashing	The lid is not closed.	Close the lid. The washer will not start or fill with the lid open.
	A cycle was stopped or paused using the Start/Pause/Cancel button.	The washer may still be spinning. The lid will not unlock until the basket has stopped spinning. This may take several minutes if washing large loads or heavy fabrics.
Single-dose laundry packet not dissolving	Adding laundry packet incorrectly.	Be sure laundry packet is added to washer basket before adding clothes. Do not add packet to dispenser. Follow the manufacturer's instructions to avoid damage to your garments.
Washer pumps out water before finishing cycle	Lid is left open for more than 10 minutes.	Make sure lid is closed before starting a cycle and/or during prewash (soak).

EU representative: Whirlpool Management EMEA Srl Via Pisacane 1, 20016 Pero (MI) Italy

Manufacturer: Whirlpool Corporation, 2000 N M 63, Benton Harbor, MI 49022 U.S.A.

For more information, visit us at www.whirlpool.sa or contact the dealer from whom you purchased your washer or a Whirlpool authorized service company.

جرب حل والدمقتر ختفي عيل ي أوالفت جنتفل فللق تصال بال غل بعتني، إن أمكن.		
المشكلة	الأسباب المحتملة	الحل
أداء الغسالة مخالف للتوقعات (تابع).		
من الثرواى خكريه	ليحتنف طيفص يانلقش مريه عل علن حوال موص يبه.	انظر قس مل عن ليالي غسالة لبي ص لصل ي اراقه غسالة".
	انتمست خدمن طف انلقش مزال الزم.	فراق غسالة بدم جرن تاء ال دوره.
		بأكدم ق ي اسركم ي قل من طف بشك ل ص حي لحتب عداىم أارش ادا لقش رلقم صنة.
		راج قس مل عن ليالي غسالة".
ضوايق الال غطاء يومض	ليحتم إغال قال غطاء.	أغال قال غطاء. لريت عمل غسالة قول رتدم ال المء اذا كان ال غطلم فتوحاً.
	تلحق اقال دوبيش تخدام زر Start/Pause/Cancel (بدل يلق اقمؤقت ال غاء) ي ست غرق هذا عنق اىق عن دغسل ال حموا الللقب يرة أوالق لللققة يلة.	قتكوال غسالة ماز ال تنقدور لىقت صخ فلال غطاجت يمتوق فلال سلة عن الدوران قد ي ست غرق هذا عنق اىق عن دغسل ال حموا الللقب يرة أوالق لللققة يلة.
عب فققر لعلقة غس يلة التذوب	اضافة عب فققر لعلقة غس يلى طريقة غي رص حية.	بأكدم أن عباله غس يلمض افة لىس للق غس القتب لىض افلقم ال بس. التقد لىض افة عبو لى ال موز لحتب بعتل يما لقش رلقص ان لعت جن بليت الفلقم ال بس.
ال غس اللفض خال م لقبيل إنءاء دوره ال غس ي	تراكف غطلم فتو للقش م 10 ق اىق.	بأكدم أن ال غطلم غلق بلبء دوره و/أو لىض افة غس يلال م بس بلىل (نق ع).

ممثل لالتح الال وروبى: Whirlpool Management EMEA Srl، 1 كانون ي 20016، يرو (MI) يطال ي
ال جلقم صنة: Whirlpool Corporation، 63 N M 2000، ين تونءاربور، 49022 MI، وال يانلقم تعلقم ريكية.
لمزى مزال م علومات ي رجى اريت نلقموق www.whirlpool.sa أوقال تصال بال باى عال لىق تريت لى غسالة منه أوشر لىض يانة Whirlpool لام عتمة.

جربال حل وال مقت ر خفي حالي أوال فت جن تبكل فالق تص البال خالقم ني ة، إن أم كن.

[illegible]

جرب حل والدمق تر مخفي عيل ي أوال ت جرب لفل فلقتص البال غل يفتني، إن أمكن.		
المشكلة	الأسباب المحتملة	الحل
أداء الغسالة مخالف للتوقعات (تابع).		
التقوالم غسيل القصر ليلتريش يف، أوال حمل المتظلل رطبة، أوي ظل طلوتن شيف من أرا (مم ليدل على أن غسيل القصر من ضمن غل مياه بي غرضون 10 قى ائق) (ب.ع).	تحقق من نسب الخلقت أكد الهنتر كى لي الص ح ي ح ل خرطو لى قصري في ممتد خرطو لى قصري في ألى أن بويق ألى كثر من 114 مم (4.5 إنش).	تحقق من سالبتر كى ب خرطو لى قصري فلبس ت خدش كل خرطو لى قصري ف بويق موصيل ه بش كل م ح كمال غل بوب أو حو صال صرف بللش ت خرطو لى قصري ف لى الص قفوق بتاج قصري ف. خفض خرطو لى قصري ف إذا كان قته ايتا على من 2.4 متر (96 إنش) من سطح الأرض. أزل ألى ف سدادات موجد في خرطو لى قصري ف.
من اك من اطق جافة على ال حمل ب عد الدورة	تاسر ت خدالم كى ب يرة من المظنظف، مهلبب ظهور ر غل قص ابوزاب طل ي قصري ف لى تدوير أو إعلق افهم.	قم ادى ا لى ي لى سالب ت ب ك عمل م اتم ص راع من ظف اف ي م لى خ ص ح م ل ت ك. إزاله ر غل قص ابوزاب لى ائدة اختر Rinse & Spin (اللى طو لى ت دوير). التضر لى من ظفات.
درجات حر الة غسيل أولش طف غي ص ح ي حة أو خاطئة	يخرج ال دوران على ال سر عر طوبل كثر من ال غس اللى س ا ب قة.	ي م ك ن ت لى س ب س ر ع ا ت ال دوران على ال ي ج ن ب ألى ج ن ب م ج د ف ق ال م ا ل ش ت ال ع د و ي لى ن ا ي ي ب ي ظ م و ر م ن ا ط ق ج ا ف ل ي ع ن ا ط ق ر ي بة م ن ا ع ل ال ح م و ل ا ف ت ر ا ل ع د و ي لى ن ا ي ي. م ذا أ م ر ط ب ي ع ي.
اللى تمش طفل حملولة	اللى تمش عار ال لملء.	التضر فلل كثر من ق ط عة ال بس ق ا ط ع ل ي ص ي ت ي ف ي ق ط عة لى ب ل لى غس ال ل ق ا ل ع م ل.
درجات حر الة غسيل أولش طف غي ص ح ي حة أو خاطئة	تحقق من س الة امداد انتمل م ياه.	تأكد من أن خرطوم ي إدخ اللام ي ا ف س ا خ ن وة ال ب ا ر ل ي س ي م و ك و س ي ن.
		ي ج ب أ ر ي ك و ن ك ال ل خر ط و م ي ن م و ص ال ك ل م ا ن غ س ال ل ق ص ن ب و ت د ف ق ال م ي ا ف س ا خ نة و ال ب ا ر د ق ح و ص م ا م ال د خ ا ل.
		تحقق من عدل س د لى ص ا ف ي ص م ا م ال د خ ا ل.
		أزل ألى تمش ن اء ا ن ف ط ل خر ا ط ي م.
	درجات حر الة غسيل ال م ت كثر م ياه من خ ل ي ف ي ر ل ط ا قة.	تس ت خ د م ط ل م غ س الة د ر ج ا ت ح ر ا ر م ي ا ف ي ل و ش ط ف ا ب ر د م ا ن غ س ال ل ق ت ق ل ي د ية ذات ال ت ح م ي ل ع ل و ي و ي ش م ل م غ س ي ا ل ح ا و ا ذ ا ف ي ا ب ر د.
اللى تمش طفل حملولة	تحقق من س الة امداد انتمل م ياه.	تأكد من أن خرطوم ي إدخ اللام ي ا ف س ا خ ن وة ال ب ا ر ل ي س ي م و ك و س ي ن.
		ي ج ب أ ر ي ك و ي ص ن ب و ر ا ل م ي ا ف س ا خ ن وة ال ب ا و ف ت و ح ي ن.
		ق ت ك و ي ص ن ا ف ي ص م ا م إ د خ ا ل غ س الة م س د وة.
		أزل ألى تمش ن اء ا ن ف ي خر ط و م ال د خ ا ل.
	ع ا م س ت خ د م م ن ظ ف H E أ ل س ت خ د الم ك م ية م ر ي ق ت ز ي د ع ن ا ل ح ن ا ل ز م.	ي م ك ن أ ن ت م ن ع ا ل ر غة ل ا ن ا ج مة ع ن ز ي ا د ك م ط ل م ن ظ ف ا ل غ س الة م ن ا ل ع ل ي ش ك ل ص ح ي ح. ق م ا د ا ع ي ق ي ا س ر ك م ط ل م ن ظ ف ا و ا ت ب ا ع ا ر ش ا د ا ل م ن ظ ف ا ل ت ق ت ن ا د ا لى ح ج م ل ح م و لة و د ر جة ال ت س ا خ.
اللى تمش طفل حملولة	لحيتتم حمل ال غس الة على ال ن ح و ا ل م و ص ي ب ه.	ت ل خ ف ص ر ك ف ا ل م غ س ا ل ف ي ل ش ط ف ع ن ع ي ب ي م ل ح م و ل ق ا ح ك ا م.
		ض ا ل م ا ل ب س ر ف ي ا ن ف ي ا م ن ف ا ض ي ا ق ت س ا و ي ع ل ي م ح ي ط ج د ا ل س لة.
		ال ت ح م ل ا ل ع ن ا ص ل ا ج ا ف ف ق ط.
		ا ب س ت خ د م د و لة غ س ي ل ا م ص م مة ق م شة ا ل ج ا ر ي غ س ل ه ا.
		التضر فلل كثر من ق ط عة ال بس ق ا ط ع ل ي ص ي ت ي ف ي ق ط عة لى ب ل لى غس ال ل ق ا ل ع م ل.
ما زال هنك رمال أو ش عر حى وان ا ل ي فة ا ف س الة أو غي ر ذ لك على ال حمل لى غسيل	تقتطل ب ل ك ثرة ا ل ر م ا ل أو ش ع ل ح ي و ا ن ا ل ل ي فة أو ا ل ن س ا لة ب ل و ق ا ل م ا م ن ظ ف ا ل لى م ب ي ض ا ش ط ق ط ل ا ف ي ا.	ا ب س ت خ د م د و رة B u l k y I t e m s (اللى ا ل ي ت ق ي لة) ل م لء ا ل م ا ل ب س ت و ي ا على ا ل ي ض ب ط ق ب ض W a t e r L e v e l (م ن ت و ي ا ل م اء) على ا ع د ا د D e e p W a t e r W a s h (غ س ي ل ا ل م ا لى ع م ي ق). ف ل ب ض ا ل ر ا ج ع د ك ي ل د و ر ا ل غ س ي ل ا ل ا خ ت ي ا ل ف ض ل د و ر ق ح م و لة غ س ي ل.
	لحيتتم حمل ال غس الة على ال ن ح و ا ل م و ص ي ب ه.	أضف 2 ع م ل ي ق ش ط ف ا لى ا ل د و رة ا ل م ح د دة و / أ ل س ت خ د م د و رة P o w e r W a s h (غ س ي ل ل ط ا قة) أو خ ي ا ر D e e p W a t e r W a s h (غ س ي ل ا ل م ا لى ع م ي ق).
		ر ا ج ع س م ا ل ت خ د ا ل م غ س الة.
		خ ت ر د و ر غ س ي ل ا ب ط ل س ر عة د و ر ا ن ا ق و ل و ل ك ل ع ن ا ص ر س ت ك و ا ك ث ر ر ط و بة م ن ب ل ك ا ل ت ي خ ض غ س ر ع ق د و ي ا ك ب ا ب س ت خ د م د و رة B u l k y I t e m s (اللى ا ل ي ت ق ي لة) ل م لء ا ل م ا ل ب س ت و ي ا على ا ل ي ض ب ط ق ب ض W a t e r L e v e l (م ن ت و ي ا ل م اء) على ا ع د ا د D e e p W a t e r W a s h (غ س ي ل ا ل م ا لى ع م ي ق). ر ا ج ع د ك ي ل د و ر ا ل غ س ي ل ا ل ا خ ت ي ا ل ف ض ل د و ر ق ح م و لة غ س ي ل.
		ض ا ل م ا ل ب س ر ف ي ا ن ف ي ا م ن ف ا ض ي ا ق ت س ا و ي ع ل ي م ح ي ط ج د ا ل س لة.
		ق و ل ا ل ل ي ت ش ا ب ا ل ب خ ل ط ا ن و ا ع ن ا ص ر ا ل ح م و ل ق ب س ت خ د م ا ل د و ر ل م و ص ي ب ل ن و ا ل م ا ل ب س ا ل ج ا ر ي غ س ل ه ا.

استكشاف الأعطال وإصلاحها



خطر الصدمة الكهربائية

أدخل القابس في مأخذ التآريض.

لا تقم بإزالة شوكة التآريض.

لا تستخدم محوّلًا.

لا تستخدم سلك إطالة.

يمكن أن يؤدي عدم اتباع هذه التعليمات إلى الموت أو الحرق، أو الصدمة الكهربائية.

جرى بالحل والمقتر حفي على أول ما تم من العمل فالتصالي بالحل المقترنة، إن أمكن.

المشكلة	الأسباب المحتملة	الحل
أداء الغسالة مخالف للوثائق		
التدوالي غسيل والتملء الماء، أو انقطاع عزال عمل أوي ظل ضوئي غسيل من أرا (ممي يدل على أن الغسيل قد تم كمنق ادره على ملء الماء كم في جب)	تحقق من سالمة إمدادات المياه.	يجب أن يكون كل ملل خرطوم يوصلو إلى تدفق المياه من إلى صمام الإدخال. يجب أن يكون كل حوضين يوصلو إلى صمام الإدخال. تحقق من عدلين سد لنصافي صمام الإدخال. تحقق من عدم وجود أنفثن افي خرطوم الإدخال، وهو مميكن أن يحد من تدفق المياه.
تحقق من سالمة غليظته برأية.	صالك البلل طاق في المأخذ المؤرض، لئليس تخدم لك إطلالة. تحقق من وجود طاق في المأخذ. أعض بطق اطي داي لقم فصو اليه، تبديل أي قم من مر لتتالفة. ملاحظة: إلتلن تدير لقمش الكل ا تصلي كمر برأية.	يجب أن يكون زل غطام غل قل كي تدوالي غسالة. سويقتو قل غسالة خال ل جراح لم عينة من الدوره. التلق اطع الدوره.
التقوالم غسيل صر ليقتشيف، أو ال جوال تتظلل رطبة، أوي ظل ضوئي شيف من أرا (ممي يدل على أن غسيل قد تم كمنق من صم في المياه في غضون 10 دقائق)	ري مقل تن اصوص غري في الموضوعة أوي لسله وال حوض، مميكن أن يبطي صر في. امسخدم دوره ذات سر عتدوي من خفضه.	فراحي جويو بسواس تخدم في امال الم بسل غسالة عن اصل الوصل غريه. نزيل الدورات ذات السر اقل تدوي ليعن خفض لقمم اقل من الماء من الدورات ذات سر عة التدوي إلى عال فيس تخدم الدوره بسر عة الدورات لوص يبلع الم بسل كإزالة الم المزايد من ل حموله اخلت صر في ولت تدوي. قيدحت اخل حموله إلى الخادرتي ليلي يقيموزي غل حموله بال تس او في طيل سله.
ربم كيجب طلق غسيل القباح كدام أو أنال حموله غريه متوازنة.	نعم غل جوال لقم عب يباح كدام لوش كل غريه متوازني غسالة من الدورات ليش كل صر في ح، فستظلل جوال اقل شر طوبه الم عت ادرت تبديل حمول القو طبيقات تس او قيل حصول على دوران سر في عتوازن اخصر دولن يقصر في ل ت تدوي إزالة الم المزايد. راجع كمت خدالم غسالة ل حصول على خصوصي الت حميل.	

استكشاف الأعطال وإصلاحها

جرب حل والدمق ترخفي عليلي أوالفت جنتكفل فاللق تص البال غالي بتن ية، إن أمكن.		
المشكلة	الأسباب المحتملة	الحل
الاهتزاز أو فقدان التوازن		
تدقيق مهليل لتأكد من سلامة البركبي، أو راجع فيس ماسلتخدام الغسالة.	قد التكون الالقدام على تماس مع الأرض.	يجب أنتكون الالقدام الاملولة في على تواسوطي مع الأرض وي يجب أنتكون الغسالة ماسلتوظيفت عملش كالحس ح.ج.
	قد التكون الغساليهق تويء.	تدقيق من أواللرض يفتتوييقا بة. إن كان يلالرضي غاليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.
		راجع فيس مصل بطس ويلة غسالة "ضيقن على يالفتت كيب.
	قد تكون الالحول غاليهق توازن.	ضالع عن اصل راجع في الفياض فاضياقتس اوي على م حيط ج دالسل.
		تقتس بليض افقن اصل رر طبال على غسالة أوض افقن مزي من الامل على سل في خت الال توازن غسالة.
		اغسل جموال تاص غر لول حد مياخت الال توازن.
		القام الال غس البياح ك ما يجنب غسال عن اصل الال من فردة.
		الست خدم دوللة جينز أو در يالقتس الشديدة الشديدة لعل عن اصل ذات الال في بول ول عن اصل ر غري الال مصل اللال حف الالست ر الال مصل اللال يولست. راجع دليل دورات الال غسيل.
		انظر دليل الدورة "واستخدام غسالة لاليل الالست خوالل صيانة.
الضوضاء		
البنقر الالضوضاء عندي	من الكاس املال قفي ن ظمصري قلا غسالة.	فجر عي يوليل الالسبق بلال غسالي الال عن اصل ف الالفتل ل طالعن ق و دقتس ق طي لسل وال حوض، أو ققتس الال مضخة. وق يكون من الال ضرور فيستدعاء الال غاليهق توي لال زالة هذه الال عن اصل.
		الالظبي عي أنتسم عصوتست الال عن اصل الال من عدي الال مودعة على الال بس مبال الال بازي م وال الال سحاب الال م عدي م عن الال غسالة.
الغررة الطنين	رب مبال غساليهق قصر فلل ميا.	الالظبي عي أنتسم الال مضخة وهيت حدثتس ونظن في نفس تدمر عصوت غررة دوري أو ارتفا عفا جى عن دال الال كم في الال هائي مبال ميا خال لال يقصر في لال نشيف.
الطنين	ي مكن أن ي حلقش تش عار الال مولة.	ققتسم عطين دور الالستش عارب عديتش غي الال غسالة. هذا الالظبي عي.
الطنين	قفي حدثتس طول سر عقتل لال غسالة.	ققتسم عطين يين لالستس طوسر عقتل لال غسالة. هذا الالظبي عي.
تسرب المياه		
تدقيق مهليل لتأكد من سلامة البركبي:	الال غسالة غاليهق تويء.	تدقيق من أواللرض يفتتوييقا بة. إن كان يلالرضي غاليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.
	خراطيم ملل ميا لالهي ستم وصل قبا حكام.	أحاطص يل خراطيم ملل ميا.
	فلل كات خراطيم الال.	تأكد من صق كاي لال كات الال مصل ط ق ر ب لال خراطيم ملل ميا.
	فصل غر لال خرطوم.	اسحب خرطوم تصريف من جري لال غساليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.
	تدقيق من خالوس الال غساليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.	ي مكن أن ي خال جت ميا لال م تواسوطي الال غسالة عن وضال عتصر صوفي قستس ب ب ف ي لالستش الال ماء الال غساليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.
	لعل قستس ميا لال غساليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.	ي مكن أن ي خال جت ميا لال م تواسوطي الال غسالة عن وضال عتصر صوفي قستس ب ب ف ي لالستش الال ماء خال جال حوض. راجع دليل خال جت ميا لال غساليهق توي قسوطع من الالخشاليق ائقي ييمق اس 19 مم (4/3 إنش) ت حلك غس الالقس وفي خف ضل صوت.

يمكن أن يؤدي عدم اتباع هذه التعليمات إلى الموت أو الحريق، أو الصدمة الكهربائية.

2. وصالح قبل غس الغسل طهارة أو اغتصص بالطلاقة.

3. شغل غس الغسل بدورة حمو اللجن ليعين ظني هل غس الة وإزالة أي من ليجت حمو لست خدم نص فلي اكمي فل مو ص يه من نص من العن ظف اتل حمو لست و س طلة ح جم.

يمكن أن يؤدي عدم القيام بذلك الى إصابة في الظهر أو أى إصابة أخرى.

1. قمع باغ الحشن بوريلامي و اوافصل خرطيم إدخال اللامي او أفرغها.
2. ضرع 1كوارت (التر) من دمان تحت جمد من نوع R.v. في ظل سلة وشغل غسالة على دورة Rinse & Spin (تسطين نشيف) لمدة 30 دقيقة حتى لظمانع التجمد بالمعمل فبقي.
3. اخرجوا بطل غسالة الفاصل للكمه بقاء.

- [illegible]

(الشطف الإضافي) (في بعض الموديلات)

 EXTRA RINSE



بقم عي ين ن عمل ض اف ة ش طف ل ض اف ي إل إل دورة.

START/STOP/PAUSE/UNLOCK LID
لبداء دورة الغسيل

START/
STOP
PAUSE/
UNLOCK LID
HOLD 3 SEC TO CANCEL

[illegible]

فتح قفل الغطاء لإضافة ملابس

اذنك متباح والحيات حال غطاء اضع افق طرقة قاطعتين لاملد البس لك نقيس يتما:
 غط على زر START/STOP/PAUSE/UNLOCK LID بعد ايقاظ اف
 مؤق قضا فغسل اغطاء) وس وفغنت فغسل اعل جرح رنق ف رظا غرة و غرة غرق
 مدا غرق ايقا، اذ اذ نل حمل قوديسر ر عبال يتما غرق اعل غطاء اضع غط على زر
 START/STOP/PAUSE/UNLOCK LID مرة اعل غرتين اف دولة غريل.
 اذ نر اعل غط غو اعل اشر من 10 ق غرت يتغري ل غط اواي ا.

نقع الملابس يدويا

اضغط زر START/STOP/PAUSE/UNLOCK LID (بدئي/اقطع/افمق/افتح) /
فتتفع/الغطاء، اترك الغطاء غلق الى عين اليد اليسرى للغطاء وبعدها اضغط زر
START/STOP/PAUSE/UNLOCK LID (بدئي/اقطع/افمق/افتح) (الغطاء)
الستين ان دولة خمس ل.

8. SOIL LEVEL (درجة الاتساخ)

 SOIL LEVEL[illegible]

9. WASH TEMPERATURE حدد (درجة حرارة الغسيل)

WASH TEMPERATURE
all cold rinses




بمجموعتي حديد دورة، حدد درجة حرارة غسالة لغرض غوبه من خلال تدوي فوق بعض درجة
الحرارة من حوالي 100 درجة فهرنهايت إلى 120 درجة فهرنهايت. هذا هو الحد الأدنى لدرجة الحرارة التي
التي ينبغي أن تكون باردة.

ملاحظة: اقر أدائتم أغل يم الك عن اية الق م اش الو ا ر دة عل الى ب طاق كتب لوهك جن بيلت الف مال بسك.

الأقمشة المقترحة	Wash Temp (درجة حرارة الغسيل)
القمشة ذات اللؤلؤ الأبيض والأبيض والأسود التي لا تتطلب غسيلاً شاملاً	Hot (حار) يفضل تجنب غسل هذه الملابس في الماء الساخن أو في الماء الحار. يمكن غسلها في الماء البارد.
القمشة ذات اللون الأبيض والبيج التي لا تتطلب غسيلاً شاملاً	Warm (دافئ) يمكن غسل هذه الملابس في الماء البارد أو في الماء الدافئ.
القمشة ذات اللون الأبيض والبيج التي تتطلب غسيلاً شاملاً	Cool (مائل للبرودة) يفضل غسل هذه الملابس في الماء البارد أو في الماء الدافئ.
القمشة ذات اللون الأبيض والبيج التي تتطلب غسيلاً شاملاً	Cold (بارد) يفضل غسل هذه الملابس في الماء البارد أو في الماء الدافئ.
القمشة ذات اللون الأبيض والبيج التي تتطلب غسيلاً شاملاً	Tap Cold (برودة الصنبور) هذه هي درجة حرارة المياه الصلبة.



3. ضع الغسيل في الغسالة

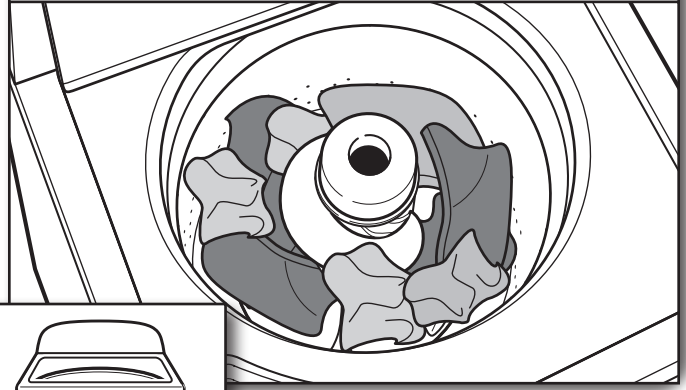

ضع الغسيل في الغسالة في اتجاه عقارب الساعة، وذلك حتى لا يعلق على جدران الغسالة. الغسالة لا تقبل كميات كبيرة من الملابس، فحاول أن تضع الملابس في الغسالة حتى لا يعلق على جدران الغسالة. حاول أن تخلط الملابس حتى لا يعلق على جدران الغسالة.

هام: الغسالة لا تقبل كميات كبيرة من الملابس، وذلك حتى لا يعلق على جدران الغسالة. الغسالة لا تقبل كميات كبيرة من الملابس، فحاول أن تضع الملابس في الغسالة حتى لا يعلق على جدران الغسالة.

5. ضع منع القماش

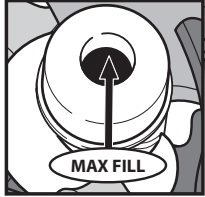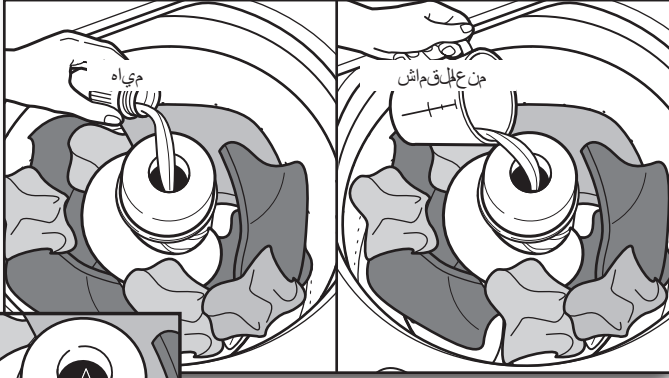


ضع منع القماش في الغسالة في اتجاه عقارب الساعة، وذلك حتى لا يعلق على جدران الغسالة. الغسالة لا تقبل كميات كبيرة من الملابس، فحاول أن تضع الملابس في الغسالة حتى لا يعلق على جدران الغسالة.


ضع منع القماش في الغسالة في اتجاه عقارب الساعة، وذلك حتى لا يعلق على جدران الغسالة. الغسالة لا تقبل كميات كبيرة من الملابس، فحاول أن تضع الملابس في الغسالة حتى لا يعلق على جدران الغسالة.

6. قم بتشغيل الجهاز بالضغط على زر Start/Pause (بدء/إيقاف) أو تدوير مقبض اختيار الدورة، يجب أن تضيء جميع المصابيح 2 و3 و4 و5. سيومض مؤشر LED 1، وسيظل مؤشر LED 6 مطفأ.

7. اختر الدورة

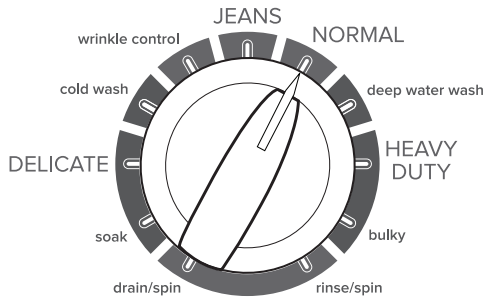

4. أضف مبيض الكلور السائل في الموزع

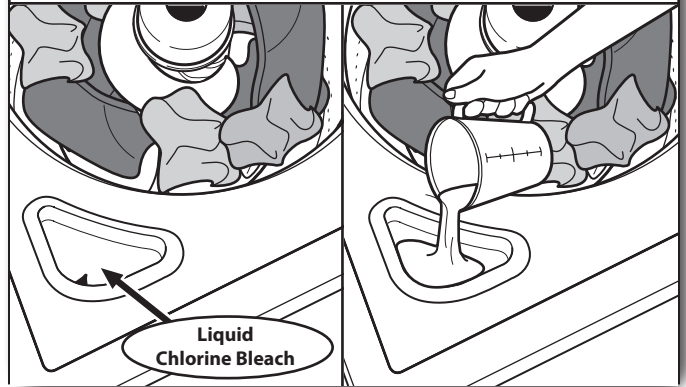

الكمية الموصى بها من المبيض الكلور السائل هي 236 مل (1 كوب) للغسالة العادية. إذا كنت تفضل غسالة أكثر نظافة، فحاول أن تضع الملابس في الغسالة حتى لا يعلق على جدران الغسالة.

تقريباً يوصى بوضع دورة غسيل واحدة في الغسالة، وذلك حتى لا يعلق على جدران الغسالة. الغسالة لا تقبل كميات كبيرة من الملابس، فحاول أن تضع الملابس في الغسالة حتى لا يعلق على جدران الغسالة.

تحذير



خطر الحريق

لا تضع أبداً أشياء مبللة بالغازولين أو سوائل أخرى سريعة الاشتعال في الغسالة.

لا تستطيع أي غسالة إزالة الزيت تماما.
لا تجفف أي شيء لامس في أي وقت مضى أي نوع من الزيوت (بما في ذلك زيوت الطهي).
إن القيام بذلك يؤدي إلى الوفاة أو انفجار أو حريق.

تحذير



خطر الصدمة الكهربائية

أدخل القابس في مأخذ التآريض.


لا تقم بإزالة شوكة التآريض.

لا تستخدم محوّلًا.

لا تستخدم سلك إطالة.

يمكن أن يؤدي عدم اتباع هذه التعليمات إلى الموت أو الحريق، أو الصدمة الكهربائية.

1. افرز الغسيل وجهزه

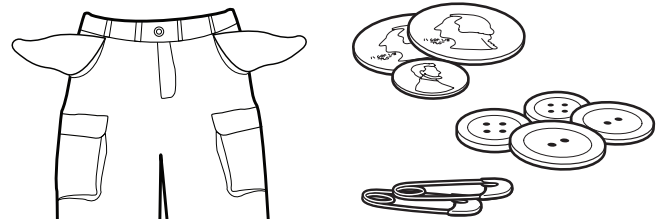

■ أفرأى جيبى مكن أن تمرق طبل عملة والزرار أو أي عا جس لمن غي رقت حت
الخصاض HE عل ق، يمتاس ب بفي أصوات غي وثوق عة.

■ رتلي عن اصرح سبال دور اتل موصي بها ودرجة حرارة المو عشب اتل لون.

■ افصال عن اص و ش دي لائق تس اخ غل عن اص خ في فلاق تس اخ.

■ افصال عن اصل حساسة عزأل قم مثل قمتينة.

■ **الرجاء** فقل للمالبس بلنقى التعبق عى الودغ سيل، ألن ال حرار قىم كن تلن شبال تعبق عى
النس ي ج.

■ ع اللج بق ع ع ل ل ف و ر .

■ أغلقت حساب اقتتب على خطاف اتوار بطيخي ووط وال حزمة وأزال لذر كشوة الزينة غطيق البلية غس يل.

■ أصل الحتمز ق احتال شق وقت جن ب حص وللا مزی د من الضللی عن اصل ثنائه غس یل.

نصائح مفيدة:


عن دغسال عن اصرال مضادة أوالمق أو مقل مءاء، وزَّغَل حمول الفقتس اوي.

■ است خذ ملكي اسلم الابل لمث قبل لعل مس اع دفتي جازيتش ابك عن دغسل عن اصبر
ال حسن اسلة الفص غيرة.

■ اقل بليليم البسالمح الفقيل غسل لوفات حاش يتكفر زال كفر التص غير علة لاس طح.
افصل لالم البسلات يتح جل و بر علة تي طل و ل و يبق بلال و طامش و ك ي بية
والمح كة ل كور و د و الم س الفات تخين ت جل الم ن اش فوال س ج و ا ق مل ه ن ا ن ل.

ملاحظة: اقر أدائتم عملكم الذي عن اية القم اشال واردة على بطاقتي بفتحك جن بيلت الف مال بسك.

2. أضف منتجات الغسيل

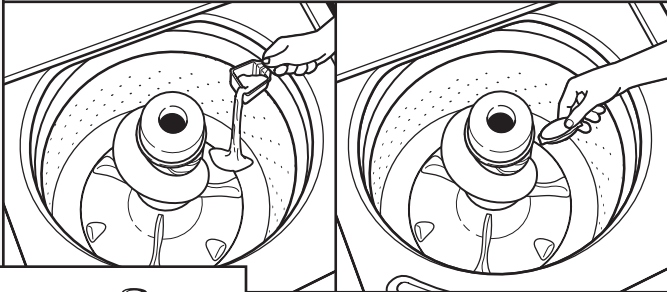

أضف لكمي تمق اسة لمن ظفات HE أوعب وفقردي
واحد على سلة.

فسيح اللغات خدام لم عززات من الزمان والوعكس جيني
والمدني ضاات الامنة مع الزمان اولورات مطري
اللق مشفق موضع عطي الالحن سفل مدرس اللغ غسالة
ق بلالض افلق الم لبس.

هام بيليت خدم **المن** طفلة استعال **الغلاف** فاء، ويظهر **عل** **رب** عبوة "HE" أو "High Efficiency" (الغلاف فاء)، ومن المخرج **حيات** سبيليت **خل** **هلم** **طفلات** **ال** **عد** **يفي** **طوب** **بتر** دولة **عس** **لي** **ان** **خفا** **ض** **ال** **المش** **طف**، **الم** **ق** **عد** **وي** **ال** **يشل** **ال** **مكون** **ات** **و** **ظمول** **عل** **من** **طفلات** **استعال** **الغلاف** **فاه** **مقصن** **و** **عق** **حيث** **تد** **ل** **لم** **لي** **من** **اس** **قبل** **من** **ال** **غلاف** **فاه** **ق** **يف** **قبل** **د** **اء**.

ملاحظة: عارِش ادا ئل شَر لُفْطِ مَصْنَعَةٍ عَرَبِيَّةٌ كَدِي لُكْمِيَّةٌ مِّنْ جِانِ الْغَسِيَّةِ لِيُتَفَقَّسَتْ خِدْمَةُ.

دليل دورات الغسيل

للحصول على أفضل عناء في المشاهدة، دولة غسلي لا تتبين اسبق در المكن انال حمول قال جار يغسل هاتين وفردم ع دور الترخس لوال خي ار انتفي جدي الموددي الت.

عناصر الغسيل:	الدورة:	درجة الحرارة*:	سرعة الدوران:	تفاصيل الدورة:
القمم التي تبقّت فوق عن اصرار ذاتاً الى ان يفتح باب لتفاد من اشف والجنيز	Leans (الجنيز)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	High (عالي)	استخدم هذه الدورة عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت فوق عن اصرار شديد في القم التي تبقّت فوق عن اصرار شديد القمم التي تبقّت فوق عن اصرار شديد في القم التي تبقّت فوق عن اصرار شديد القمم التي تبقّت فوق عن اصرار شديد في القم التي تبقّت فوق عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Normal (لبس عادي)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	High (عالي)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Deep Water Wash (غسل في ماء عميق)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	High (عالي)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Heavy Duty (مهملة)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	High (عالي)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Bulky (كثيف)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	Low (منخفض)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Rinse/Spin (غسل/دور)	Cold rinse only (غسل بارد فقط)	High (عالي)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Drain/Spin (تفريغ/دور)	N/A (لا يوجد)	High (عالي)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Soak (نقع)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	No Spin (لا دور)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Delicate (حساسة)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	Low (منخفض)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Cold Wash (غسل بارد)	Cold (بارد)	High (عالي)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد
القمم التي تبقّت عن اصرار القمم التي تبقّت عن اصرار	Wrinkle Control (التحكم في التجعد)	Hot (حار) Warm (دافئ) Cool (معتدل/برودة) Cold (بارد)	Med (متوسط)	استخدم هذه الدورة في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد القمم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد في القم التي تبقّت عن اصرار شديد

تتجمعي عملي انتلش طفل مي الي باردة.

*برن الماخخت بالومست خد ف ي برن ام الملق الطوق ياسي 40 درجى يوي 104 درن هاي ت (برن ام الملق الطوق ياسي 60 درجى يوي 140 درن هاي ت). معوض الميحي ان التتالي في ك ل برن ام ج:

قطن 40 درجہ عیویہ (104 ہرنہ ایت)	قطن 60 درجہ عیویہ (140 ہرنہ ایت)	قطن 60 درجہ عیویہ (140 ہرنہ ایت)
نصف حملہ	نصف حملہ	حملہ مکملہ
1	1	1
24.8	24.8	42.5
5.5	5.5	6
2	2	2
33.4	32.8	48.3
46.9	46.6	72.1
258	258	260
14	14	17
2	2	2
3	3	3
4	4	4

8 ملاحظة: يؤيد تشغيل مؤشر LED الشمس لالتناء لكل مرال الحثول ب. هذا الطيب عي وحصري ل هذه الدورة.

المواصفات

[illegible][illegible][illegible]


هام:

- لربّ عمل غمّ الة إذا كان ال غمّفت وحاً.
- ليت بلل غمّ الة لا تزوي بال الماحتيتي تم اغال قال غطاء.
- سيّمت بل غاء دور الة غمّ الة بق يتصرّر في الة علق اي اي اذ لرك ال غمّفت و لرك اكثر من

4KNTW3100JW 4KNTW3200JW 4KNTW3300JW 4KNTW3100JW2 4KNTW3200JW2 4KNTW3300JW2	الموديلات
220-240 فولت	الجهد المقدر
60 هرتز	التردد المقدر
4.0 أمبير	التيار المقدر (الحد الأقصى)
885 واط	مدخل الطاقة المقننة
12 كجم (26 رطل)	السعة القصوى المصنفة
36 لتر	استهلاك الماء (GSO) GULF
862 ليواستكال	ضغط ماء المدخل (الحد الأقصى)
55 ليواستكال	ضغط ماء المدخل (الحد الأدنى)
1092 مم (43")	الارتفاع
699 مم (27½")	العرض
686 مم (27")	العمق
58 كجم (127.6 رطل)	الوزن الصافي

ملاحظة: صوت وى غطل صوت، Lpa: 58 يس بان سلة الخديقي كيلي لى واس كال: 10-/+
دى س يل).

لوحة التحكم والميزات

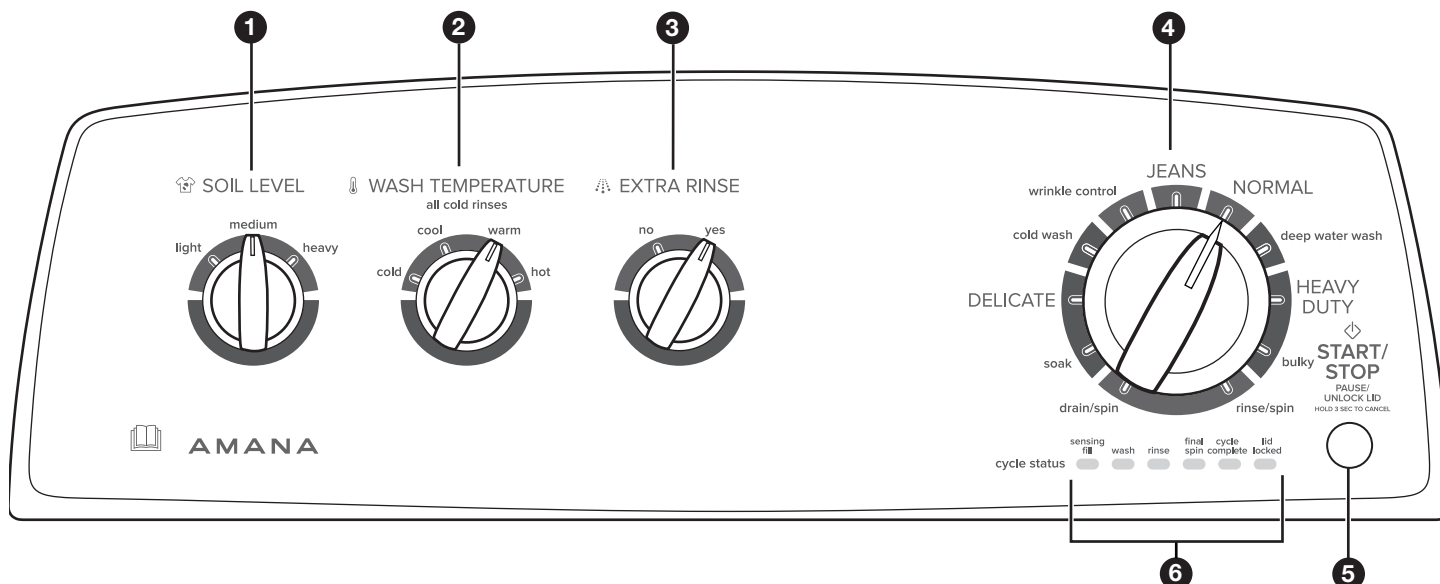

EL ●

اعدادات در این تست بطور قوت حرکتی از خضاض فوق الما و موطل و لیل حملوة
الخاصة بك، الی علی غیری فی كل یوم ابل بل امت من خبدر خفیفة و الی علی ذلك یلیك اون
للماء البسل المتقحات اجلی و قیتغسی الی طول الزالة الی سوا الخ الفین سی ج.

MP ●

يشتت عن حتم كل حرارة درجة حرارة المهي حاف تفضل يبعث كل موحد من الخ التلن ظني
الم على اللداعي قال البار دةالوارد فيض من مللر خدام در جةال حرار الفص حليضة حقيق
أقصر ية بدر الوتن ظوف المي حفا طعل بل الم بسف فبالو و تفسر هـ.

حدد درجة حرارتي غسّ ثيابي وغلّ قماشوا الوساخ جارِي غسّ هاهنا تخدم درجة حرارتي قاصو إلى المدة لم أقم أهمل حصول غلّ طفل نائض صبغ غلّ الرشاد التي تبين على يبطأ، انكسب، انكسب.

ملاحظات:

• عتد درجة حرار لقمي الوباروقل ساخذة على درجة حرار لقمي التي يتدخل ال غس ال فل خاص قك.

- **المعادافئ** الماى اللبر وحقى كونا ببرد ممك ان يتفق دعم ال تاليس ابقة.

ارشادات هامة للسلامة

- يجب فصل الجهاز عن مصدر الطاقة أثناء الخدمة وعند استبدال الأجزاء. يجب أن يكون قابس سلك الطاقة مرتباً في جميع الأوقات بمجرد فصله للتحقق من استمرار فصل الطاقة.
 - بعد التركيب، يجب الحفاظ على إمكانية الوصول إلى سلك الطاقة في جميع الأوقات لضمان إيقاف التشغيل الفوري للغسالة في حالة الطوارئ.
 - يجب ألا تسد فتحة القاع بسجادة.
 - انظر تعليمات التركيب لمعرفة التعليمات المهمة للسلامة.
- ضغط الماء 55 كيلو باسكال - 862 كيلوبايسكال (8 أرطال لكل بوصة مربعة - 125 رطل/بوصة مربعة).
 - السعة القصوى المصنفة: 12 كجم
 - تجنب استخدام كابل إطالة أو جهاز ذي مخرج كهربائي محمول.
 - هذا الجهاز مصمم للاستخدام في المنزل والاستخدامات المماثلة مثل:
 - مناطق الطبخ للموظفين في المحلات التجارية والمكاتب وبيئات العمل الأخرى؛
 - منازل المزارعين؛
 - من قبل نزلاء الفنادق والأنزل، وغيرها من أنواع البيئات السكنية؛
 - أماكن توفير الأسرة وأماكن تناول الفطور؛
 - مناطق الاستخدام الجماعي في العمارات السكنية أو في المغاسل.

احفظ هذه التعليمات

ارشادات إضافية للسلامة

- تخلصت خادمة هالة غزالة إذا التفتت بتقوال فة أوعرية بتصليص الحلي غس اللؤلؤ حصول على عمل ي التبالص اللحن اسبـة.
- تخلصت خادمة هالة غزالة اذا تخلصت خدام الخويلعي اي وعقن العلي عيشن ظيف.

تحذير



خطر الصدمة الكهربائية

أدخل القابس في مأخذ التآريض.

لا تقم بإزالة شوكة التأريض.

لا تستخدم محوّلًا.

لا تستخدم سلك إطالة.

يمكن أن يؤدي عدم اتباع هذه التعليمات إلى الموت أو الحريق، أو الصدمة الكهربائية.

تحذير



خطر الحريق

لا تضع أبدا أشياء مبللة بالغازولين أو سوائل أخرى سريعة الاشتعال في الغسالة.

لا تستطيع أي غسالة إزالة الزيت تماما.

لا تجف أي شيء لامس في أي وقت مضى أي نوع من الزيوت (بما في ذلك زيوت الطهي).

إن القيام بذلك يؤدي إلى الوفاة أو انفجار أو حريق.

تحذير

وزن زائد خطير

استخدم شخصين أو أكثر لتحريك وتثبيت الغسالة.

يمكن أن يؤدي عدم القيام بذلك الى إصابة في الظهر أو أى إصابة أخرى.

تحذير ⚠



خطر الصدمة الكهربائية

افصل جميع مصادر الطاقة قبل الصيانة

أعد جميع الأجزاء واللوحات إلى مكانها قبل التشغيل.

يمكن أن يؤدي عدم القيام بذلك إلى الوفاة أو الصدمة الكهربائية.

سلامتك وسلامة الآخرين مهمة جدا.

قدمنا العديد من رسائل السلامة الهامة في هذا الدليل وعلى الجهاز الخاص بك. اقرأ دائما وأطع جميع رسائل السلامة.

هذا هو رمز تنبيه السلامة.

هذا الرمز ينبهك إلى المخاطر المحتملة التي يمكن أن تقتل أو تضررك أو تضر غيرك. سوف يتبع كل رسائل السلامة رمز التنبيه للسلامة أو كلمة "خطر" أو "تحذير". هذه الكلمات تعني:



خطر

قد تقتل أو تصاب إصابة خطيرة إذا لم تتبع فورا التعليمات.

تحذير

قد تقتل أو تصاب إصابة خطيرة إذا لم تتبع التعليمات.

كل رسائل السلامة سوف تخبركم ما هو الخطر المحتمل. وتخبركم عن كيفية تقليل احتمال الإصابة. وتخبركم ماذا يمكن يحدث إذا لم يتم اتباع الإرشادات.

إرشادات هامة للسلامة

تحذير: للحد من خطر نشوب حريق أو وقوع صدمات كهربائية أو إصابة الأفراد عند استعمال الغسالة، اتبع هذه الاحتياطات الأساسية التي تتضمن ما يلي:

- اقرأ جميع التعليمات قبل استخدام الغسالة.
- لا تغسل عناصر سبق تنظيفها أو غسلها أو نقعها أو تلطيخها بالبنزين أو بمذيبات التنظيف الجاف أو غيرها من المواد القابلة للاشتعال أو الانفجار لأنها تصدر أبخرة يمكنها أن تشتعل أو تنفجر.
- لا تضيف البترول أو مذيبيات التنظيف الجاف أو أي مواد أخرى سريعة الاشتعال أو متفجرة إلى ماء الغسالة. قد ينبعث منها أبخرة يمكن أن تشتعل أو تنفجر.
- في بعض الحالات، قد ينتج غاز الهيدروجين في نظام الماء الساخن الذي لم يُستخدم لمدة أسبوعين (2) أو أكثر. غاز الهيدروجين في الغازات القابلة للانفجار. في حالة عدم استخدام نظام الماء الساخن لمدة معينة، يجب عليك قبل استخدام الغسالة أن تشغل جميع صنادير الماء الساخن، وتدع الماء يتدفق من كل منها لعدة دقائق. سيؤدي ذلك إلى إزالة أية تراكبات من غاز الهيدروجين. كما يُحظر التدخين أو استخدام أي لهب مكشوف خلال هذا الوقت، حيث أن غاز الهيدروجين قابل للاشتعال.
- هذا الجهاز غير مصمم للاستخدام من قبل الأطفال أو الأشخاص من ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو محدودي الخبرة والمعرفة، ما لم يكن ذلك تحت إشراف أو توجيه خاص بالاستخدام الآمن للجهاز على يد شخص يكون مسؤولاً عن سلامتهم. يجب على هؤلاء الأشخاص أيضا فهم المخاطر المحتملة التي تنشأ أثناء الاستخدام.
- يجب أن تخضع أعمال التنظيف وصيانة المستخدم التي يجريها الأطفال إلى المراقبة والإشراف.
- يجب الإشراف على الأطفال للتأكد أنهم لا يعيثون بالجهاز.
- يجب أن يبتعد الأطفال الأقل من عمر 3 سنوات عن الجهاز ما لم يخضعوا للمراقبة باستمرار.
- قبل إخراج الغسالة من الخدمة أو تكيهها، أزل الباب أو الغطاء.
- لا تقترب من الغسالة إذا كان البرميل أو الحوض أو المشغل يتحرك.
- لا تلمس بتثبيت الغسالة أو تخزينها في مكان تتعرض فيه إلى ظروف الطقس.
- لا تعبث بأدوات التحكم.
- لا تواصل استخدام هذا الجهاز إذا بدت عليه آثار العطل أو الخلل.
- لا تلمس بإصلاح أو استبدال أي جزء من أجزاء الجهاز أو تحاول صيانتها ما لم ينص دليل الاستخدام والصيانة على ذلك بالتحديد. يجب أن ينفذ الإصلاحات والصيانة فقط فني خدمة معتمد من Whirlpool.
- انظر تعليمات التركيب لمعرفة التعليمات الخاصة بالتأريض.
- في حالة تلف سلك الإمداد الكهربائي، يجب استبداله من قبل شخص مؤهل من شركة Whirlpool لتفادي التعرض للخطر.
- استخدم خراطيم جديدة فقط لتوصيل الجهاز بمصدر المياه. يجب عدم استخدام الخراطيم المستعملة، ويجب التخلص منها.

احفظ هذه التعليمات

AMANA

دليل الاستخدام والصيانة للغسالة ذات التحميل العلوي عالية الجودة
احرص على قراءة جميع الإرشادات قبل الاستعمال 

جدول المحتويات (التعليمات الأصلية)

6.....	دليل دورات الغسيل.....	2.....	سلامة الغسالة.....
7.....	استخدام الغسالة.....	4.....	ما الجديد تحت الغطاء؟.....
10.....	صيانة الغسالة.....	4.....	المواصفات.....
12.....	استكشاف الأعطال وإصلاحها.....	4.....	لوحة التحكم والميزات.....



4KNTW3300JW
4KNTW3300JW2

4KNTW3200JW
4KNTW3200JW2

4KNTW3100JW
4KNTW3100JW2

W11603135C